

US ELECTRONICS™

**User's Guide
for the**

UTV86X-E

featuring Memory Lock™

**2-in-1 Cable TV
Remote Control**



© 1997 US Electronics Components Corp.
All rights reserved

Part Number USE17095, RC9600/9640


rev 1.1 9701

before you begin

If you have a TV with a remote control, we recommend that you plug its power cord directly into a wall outlet if available (your cable installer may select an alternate setup).


Make sure to set your TV to channel 2, 3, or 4 as directed by your cable company.

install batteries

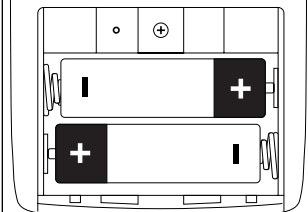

Press arrow gently
& pull down to
remove cover

Take note of the buttons that you'll use to setup your remote control

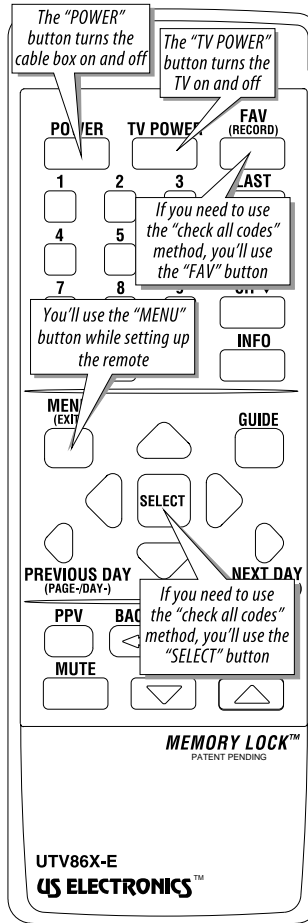

important note

Weak batteries may disrupt normal operation of the remote

We recommend that you use only AA alkaline batteries.

Remotes without the Memory Lock™ feature may need to be reprogrammed when the batteries are removed. See the troubleshooting section for more info.

setting up your remote control

for your remote-controlled television

step 1	Make sure your TV is on. Press the [MENU] button, then the [TV POWER] button.
step 2	Enter the three-digit code for your television from the "television codes" chart on the back of this sheet.
step 3	At this point you have two options depending on whether you want volume to be controlled through your cable box or through your TV: option 1: If you want volume to be controlled through your cable box, press [POWER]. option 2: If you want volume to be controlled through your TV, press [TV POWER].
test your setup	Press the [TV POWER] button. If your TV turns on and off, you're all done. If your TV <i>doesn't</i> turn on and off, perform steps 1 through 3 again with the next available code for your TV brand. If none of the codes listed for your TV work, try the "check all codes" method below.

the "check all codes" method

Follow the steps outlined in this section if you've been unable to determine the correct code for your TV. This method "hunts" through all possible codes in the remote until it finds the code for your remote-controlled TV.

1. Manually turn ON your TV set.
2. Point the remote control at the TV and press the following sequence of keys: [MENU], [TV POWER], [0], [0], [0], and [TV POWER]. If the TV turns OFF, congratulations – you're all done. *If the TV is still ON, continue at step 3 below.*
3. Press [MENU], [TV POWER], [FAV], and [TV POWER] to check the next code. If the TV turns OFF, press [SELECT] to exit this procedure. *If the TV is still ON, continue at step 4 below.*
4. Repeat pressing [FAV], followed by [TV POWER], until the TV turns OFF. When the TV turns OFF, press [SELECT] to save the code.

Please be patient: there are about 90 possible codes.

television codes

try
these
first

The codes listed in this box are for the most popular TVs. If your TV is made by one of these manufacturers, try the code listed here first. Otherwise, find your code in the chart below.

GE	005	JVC	076	Magnavox	057	Mitsubishi	067
NEC	024	Philips	057	Pioneer	046	Proscan	005
RCA	005	Sony	081	Sylvania	057	Zenith	075

Akai	021	Jensen	026	Sampo	024 058 060 079
AOC	021 024 062	JVC	032 076	Samsung	024 047 048 070
Candle	024 025 037 047	Kloss Novabeam	077	Sanyo	010 028 029 087
Capehart	079	KMC	059	Scott	044 070
Citizen	024 025 037 047	KTV	051 070	Sears	001 010 029 030 044 071
	048 050 070	Logik	074	Sharp	014 031 041 070
Concerto	047	Luxman TV	047	Sony	007 081
Contec	003 004 051 084	LXI	029 030	Soundesign	036 037
Craig	012 051	Magnavox	017 024 037 008	SSS	021 051
Curtis Mathes	024 048 070		057 077 078 080	Sylvania	008 016 017 018 024
CXC	051	Marantz	024		037 057 077 078
Daewoo	021 042 043	MGA	021 024 036 067 083	Tatung	015
	050 070 082	Mitsubishi	009 021 036	Techwood	047
Datron	070		066 067 083	Teknika	021 025 037 044
DynaTech	015	MTC	015 021 024 047 048 082		047 048 050 051
Electrohome	070	NEC	021 024 033 047		067 070 072 074
Emerson	004 020 035 036	Panasonic	002 008 011 057 088	TMK	036 047
	044 045 051 052	Penney	000 005 021 022	Toshiba	029 030
	053 070 084 086		024 061 070 071	Totevision	070
Envision	024	Philco	016 017 021 024	Universal	022 023
Fisher	010 029		037 057 077 078	Vidtech	021
Funai	044 051	Philips	057	Wards	016 017 021 022 023
GE	005 008 011 022	Pioneer	034 046		024 036 041 044 057
	023 063 064 073	Portland	070		064 065 074 078
Goldstar	021 047 054 070	Proscan	005	Yamaha	021
Harman Kardon	019	Proton	036 056 070 079	Zenith	075
Hitachi	006 027 038 040 047	Quasar	008 011		
	068 069 070 085	Radio Shack	041 051 070		
Infinity	057	RCA	000 005 021 061 068		
JBL	015	Realistic	029		

troubleshooting guide

? Problem

My remote only works one of my devices (TV or cable box).

😊 Solution

Weak batteries may cause the remote to only operate one device. If this happens, simply replace them with new alkaline batteries and reprogram the remote.

? Problem

I programmed the remote, but it won't work my TV.

😊 Solution

You may have entered the wrong code (or the correct code might not be listed). Try entering all of your TV manufacturer's codes again, starting with the manufacturer's popular code, if one is available.

If you are still unable to operate your TV, follow the instructions in the section titled *the "check all codes" method*.

? Problem

My remote control doesn't operate my combination TV/VCR.

😊 Solution

Most combination TV/VCRs have VCR tuners in them. This unit was not designed to operate a VCR. Your cable operator may have a solution for your situation.

? Problem

My remote control stopped working.

😊 Solution

Check the batteries and make sure the TV set and cable box are plugged into a live AC outlet. If you are sure the batteries are good, try rolling them with your finger to ensure a good connection. If the batteries were loose, removed to test, or replaced, you may need to reprogram your remote.*

* If your remote has Memory Lock™, you won't need to reprogram the remote control unless you want it to operate a different television.

? Problem

I can't figure out the remote's buttons.

😊 Solution

It may be necessary to review your cable box operating manual to familiarize yourself with the different buttons and features.

NOTE

IMPORTANT: Write down your TV and cable box codes on your Quick Programming Sticker (if supplied) or some other safe place where they can be located for future reference, if necessary.